 


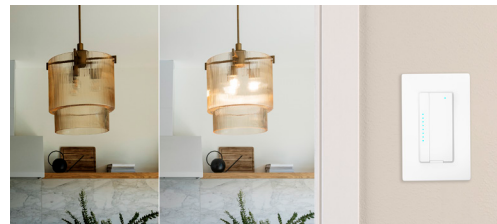

Model 99984

HunterSMART™ Dimmer Switch Quick Start Guide

Upgrade your lights into smart lights with the HunterSMART Dimmer Switch using Matter. Our step-by-step digital installation guide takes you from unboxing to setup with easy-to-follow instructions and helpful visuals. With easy access through your smart-phone or tablet so you can set up your HunterSMART Dimmer Switch wherever it's most convenient. A Matter controller is needed, which may be a smart speaker you already own like Echo, HomePod or Nest Hub.



Connect to HunterSMART™

After completing installation and powering your panel, open the **HunterSMART app** or download from the App Store or Google Play.



- In the app, select add device, then follow the on-screen prompts in the app.
- When prompted, scan the **QR code** displayed on your Dimmer Switch to connect.

3D INTERActive GUIDE

Step 1: Scan QR code with smart phone or tablet

Step 2: Follow on screen instructions

Step 3: Register your product



SCAN ME

Tips & Tricks

- Wi-Fi is required for setup through the HunterSMART app.
- If your internet is down, you can still control devices locally over your Wi-Fi network.
- Updates happen automatically through the app.
- Use Dimmable LED Bulbs: Ensure total wattage does not exceed 200W.
- Cross-Ecosystem Flexibility: Because it's Matter-certified, the dimmer works seamlessly across ecosystems. Set it up in whichever app you prefer, no proprietary app required. A Matter controller is needed, which may be a smart speaker you already own like Echo, HomePod or Nest Hub.
- Easily Set Schedules: Use your preferred smart home platform to schedule lights to turn on/off automatically. Perfect for daily routines or while you're away.

Troubleshooting

- Need to reset? Press and hold the main On/Off button for 10 seconds until the LED flashes red rapidly.
- Hardwired switches still work even if the panel is offline.
- Weak Wi-Fi? Move your router closer or use Ethernet for stronger performance.
- 3-Way Setup Ready: This dimmer is compatible with most 3-way switch configurations to control your lights from two locations.

Warranty

We've Got You Covered:

1-Year Limited Warranty

The Hunter Fan Company makes the following limited warranty to the original purchaser of the Control ("Control"): Your Control is warranted to be free from defects in material and workmanship for a period of one year from the date of sale. If the Control malfunctions or fails within the warranty period due to a defect in material or workmanship we will replace it free of charge. IF THE ORIGINAL PURCHASER CEASES TO OWN THE CONTROL, THIS WARRANTY AND ANY IMPLIED WARRANTY, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE VOIDED. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IN RESPECT TO ANY CONTROL, IS EXPRESSLY LIMITED TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE FOR SUCH CONTROL. This warranty excludes malfunctions or failures which were caused by repairs by persons not authorized by us, mishandling, improper installation, modifications, or damage to the Control while in your possession, or unreasonable use. This warranty does not apply to batteries or to deterioration or damage to the product caused by the use of faulty batteries. To obtain a replacement, return your Control postage prepaid along with proof of purchase to Hunter Fan Company Service Department at 7130 Goodlett Farms Pkwy., Memphis, TN 38016. IN NO EVENT SHALL HUNTER FAN COMPANY BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

For full details or support, visit support.hunterfan.com.

Where to Start

All wiring must be in accordance with national and local electrical codes ANSI/NFPA 70. If you are unfamiliar with wiring or in doubt, consult a qualified electrician. If a bare copper or green ground connection is not available in the wall box, contact a licensed electrician for installation. Please check your local wiring regulations before installation. Safekeeping the surroundings to prevent damage during product installation. Turn off the power supply when you clean the product. Dimming performance can vary if using different dimmable LED lamps. Flickering may happen when dimming at low light intensity. Use only with 120V/AC 60Hz. Do not exceed maximum rating of dimmer as indicated on the device. The wall box depth should be ≥35mm. Do NOT use with aluminum wire.

Safety First: Read Before You Begin

- Turn OFF power at the breaker before installation.
- Follow national and local electrical codes.
- Do not use with aluminum wire.
- Minimum wall box depth: 35mm.
- If your wall box has no neutral wire, call a licensed electrician.



If you're not comfortable with wiring, we recommend professional installation.

Pro Tip:

Take a photo of your existing wiring before you remove anything to make reconnection a breeze.

This product conforms to UL Standard 60730. FOR INDOOR USE ONLY.

Install in 4 Easy Steps

- 1 Remove Your Old Switch(es)**
- Turn power OFF.
 - Remove the switch plate and old switch(es).
 - Uncap the wire connectors and gently pull wires forward.

- 2 A: 1-Way Wiring Install**
- Cap the blue wire (load 2) from the wall control.
 - Connect the grounding wire (green, green/yellow stripe, or bare copper) from the box to the ground wire from the wall control.
 - Connect the red (live out) wire from the switch box to the red OUT wire from the wall control.
 - Connect the white (neutral) wires from the box to the white OUT from the wall control.
 - Connect the black (live in) wire from the switch box to the black OUT wire from the wall control.

- 2 B: 3-Way Wiring Install**
- Connect the blue wire (load 2) from the wall control to the red wire from the toggle switch.
 - Connect the grounding wire (green, green/yellow stripe, or bare copper) from the box to the ground wire from the wall control and the ground wire from the toggle switch.
 - Connect the red (live out) wire from the switch box to the red OUT wire from the wall control.
 - Connect the white (neutral) wires from the box to the white OUT from the wall control.
 - Connect the black (live in) wire from the switch box to the black OUT wire from the wall control.

- 3 Secure the Switch**
- Use included hardware to secure wall switch to switch box.
- 4 Wall Plate Installation**
- Snap the wall plate into place by applying pressure across the plate onto the dimmer switch.

Operation Cycle: 10 000 (Manual)
Disconnection Type: Micro-Disconnection
Type 1 Action: 1.Y
Pollution Degree: 2
This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference,
and (2) this device must accept any interference received, including interference that may cause undesired operation.








Turn Power OFF



WARNING


To avoid possible electrical shock, before installing your control, disconnect the power by turning off the circuit breakers to the outlet box associated with the wall switch location.

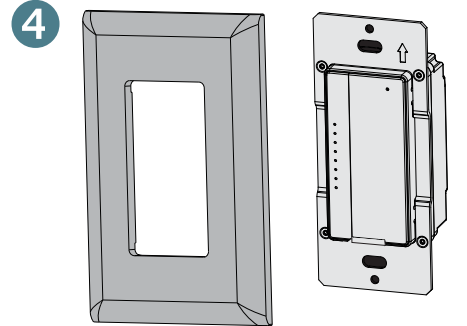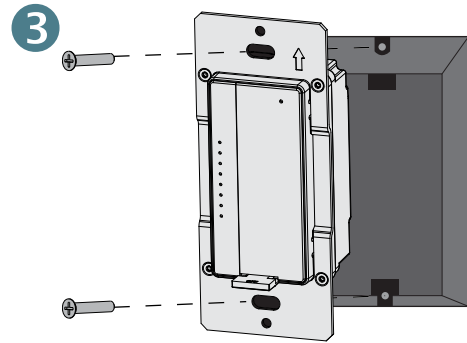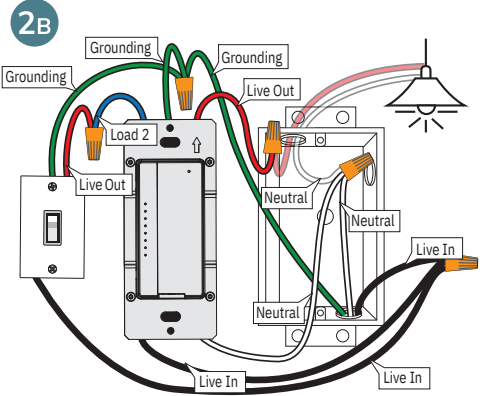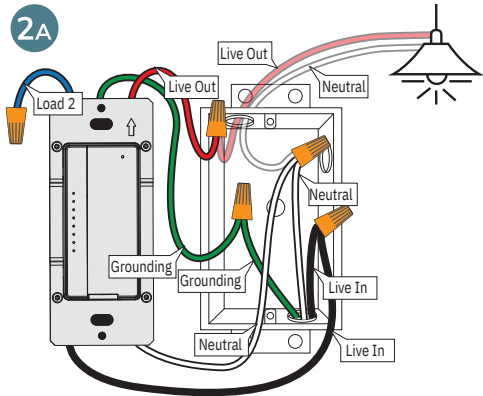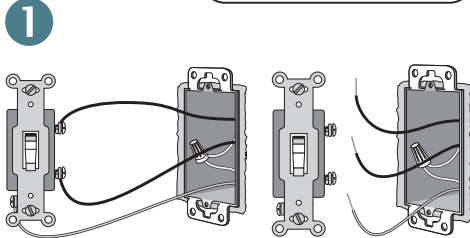



Turn Power ON

Operating the Switch

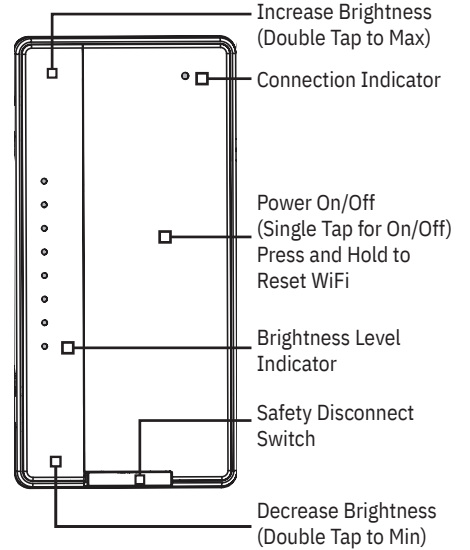

Function	Connection Indicator
Factory reset	Red rapidly flashes
Product on (ready to connect)	White light flashes
Product on and connected	White solid
Product disconnected	Red light flashes